



# Alignment Mode

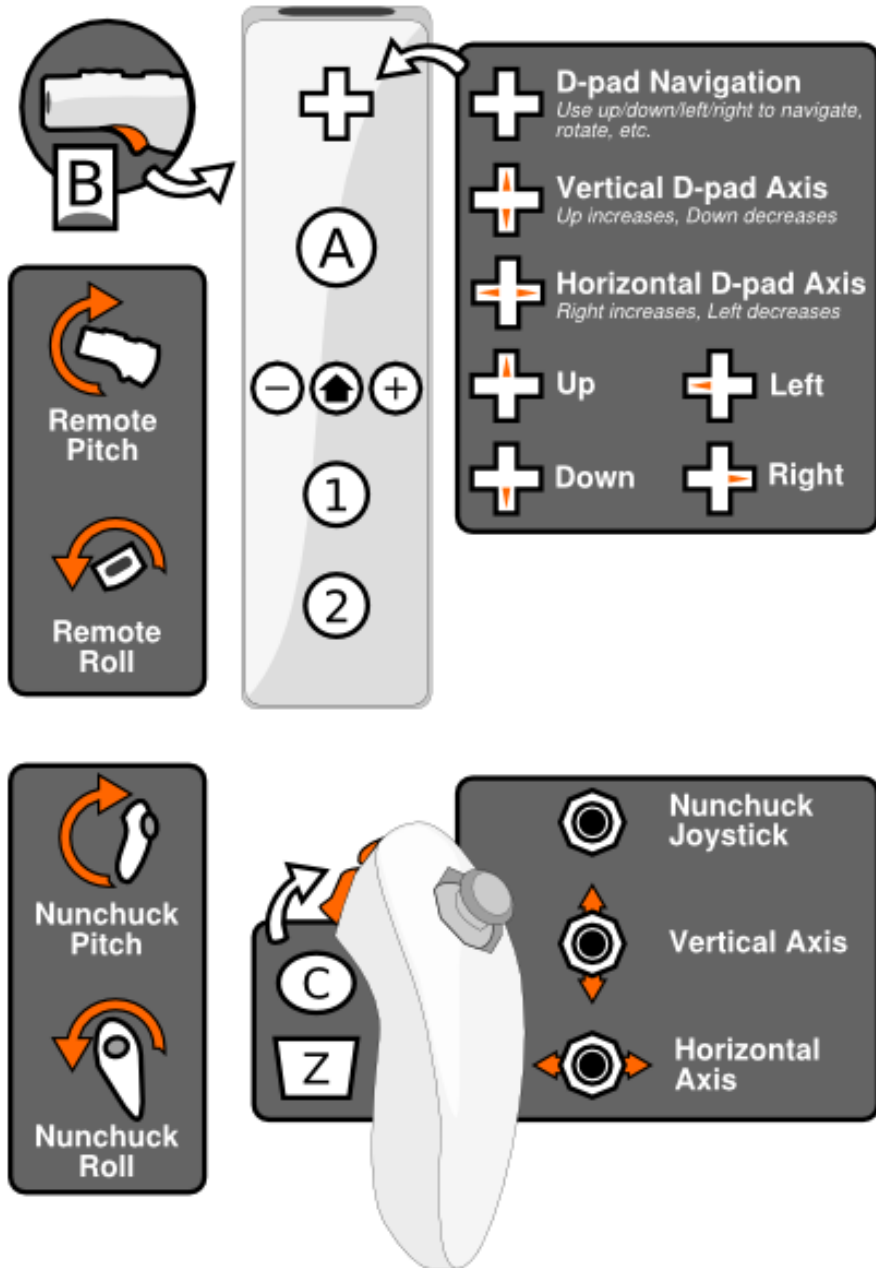

	<b>Translate X</b> Translate the X coordinates of the currently selected projector.
	<b>Toggle Vertex Tweak</b> Toggle between vertex tweak mode and projector adjustment mode.
	<b>Rotate</b> Rotate the currently selected projector.
	<b>Scale Y</b> Scale the currently selected projector vertically.
	<b>Previous Projector</b> Select the previous projector in the list.
	<b>Turn Projector On/Off</b> Toggle whether the currently-selected projector is on.
	<b>Toggle Redball</b> Toggle the redball alignment mode.
	<b>Next Projector</b> Select the next projector in the list.
	<b>Rotate</b> Rotate the currently selected projector.
	<b>Scale X</b> Scale the currently selected projector horizontally.
	<b>Translate Y</b> Translate the Y coordinates of the currently selected projector.
	<b>Vertex Selection</b> Select a vertex to transform when tweaking vertexes.

# Play Mode

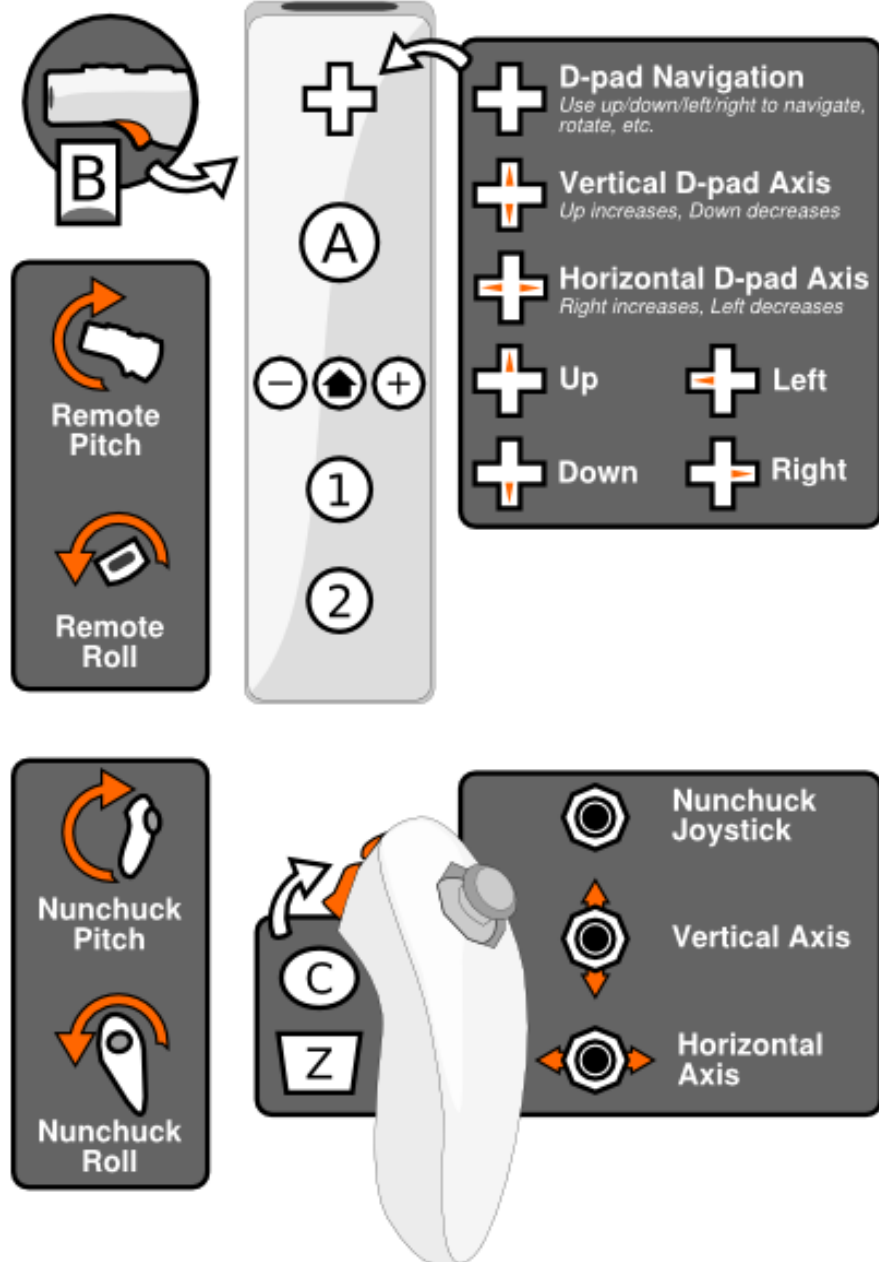

Basic (built-in, default) <span>Set as default</span> <span>Make a copy</span>	
	<b>Y tilt decrease (button)</b> Hold to decrease y axis tilt.
	<b>Next</b> Go to the next clip in the playlist.
	<b>X tilt increase (button)</b> Hold to increase x axis tilt.
	<b>Step, then Fast Forward</b> Steps when clicked, hold to fast forward.
	<b>Reset Tilt</b> Reset the sphere tilt to 0, 0, 0
	<b>X tilt (axis)</b> Change the x axis tilt.
	<b>X tilt decrease (button)</b> Hold to decrease x axis tilt.
	<b>Toggle Playing</b> Toggle between playing and paused.
	<b>Fast Forward</b> Hold to fast forward.
	<b>Y tilt (axis)</b> Change the y axis tilt.
	<b>Step, then Rewind</b> Steps when clicked, hold to rewind.
	<b>Rewind</b> Hold to rewind.
	<b>Z tilt (axis)</b> Change the z axis tilt.
	<b>Y tilt increase (button)</b> Hold to increase y axis tilt.
	<b>Previous</b> Go to the previous clip in the playlist.